



The dimension in red gives the distance from the top of the RH 1000 to the INVERT of the pipe.

The dimensions in green give the distance from the top of the RH 1000 to the top of the pipe.

The dimensions in black refer to the INNER diameter of the pipe.

## RH 1000

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

Dimensions in mm.  
unless otherwise stated.

[info@padmanstops.com.au](mailto:info@padmanstops.com.au)  
tel. 03 5874 5282

# Padman Stops

Innovative Irrigation Solutions

