

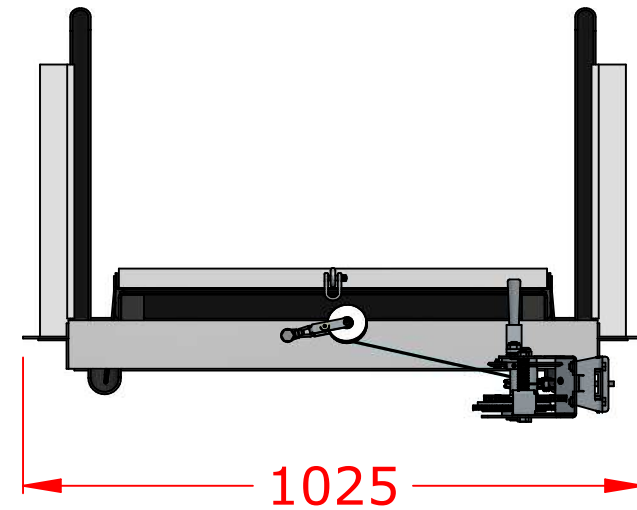


Top view

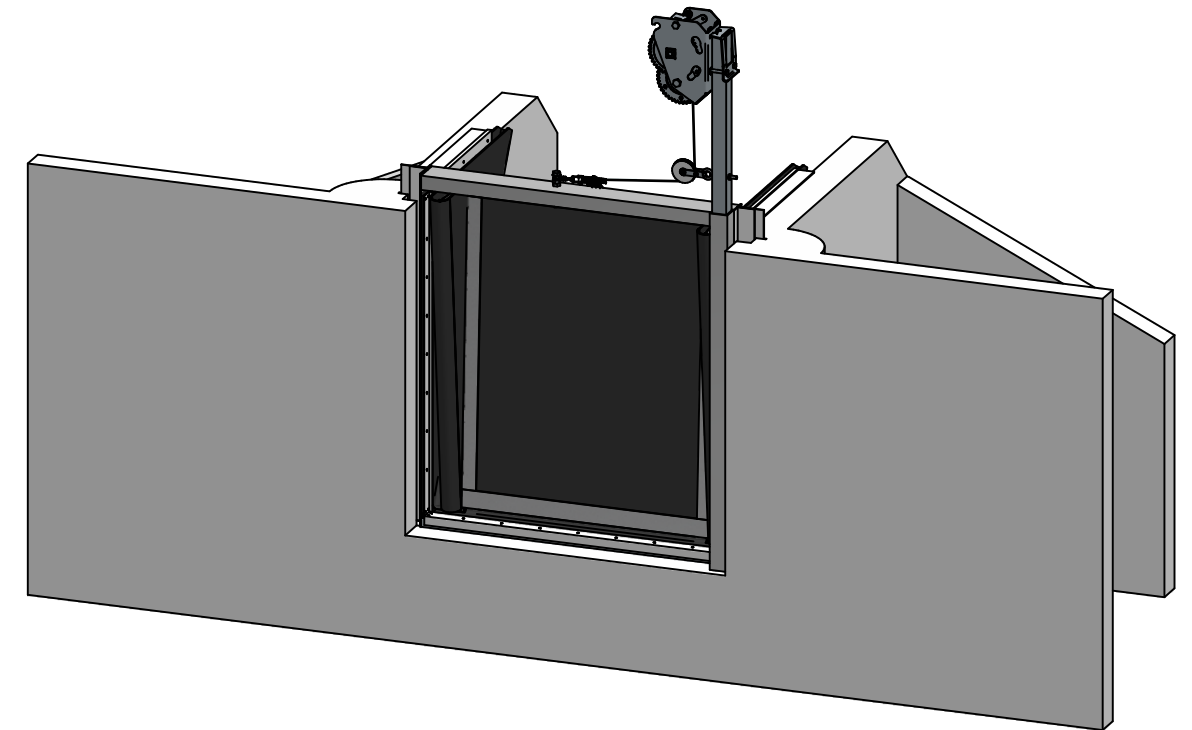

Upstream view

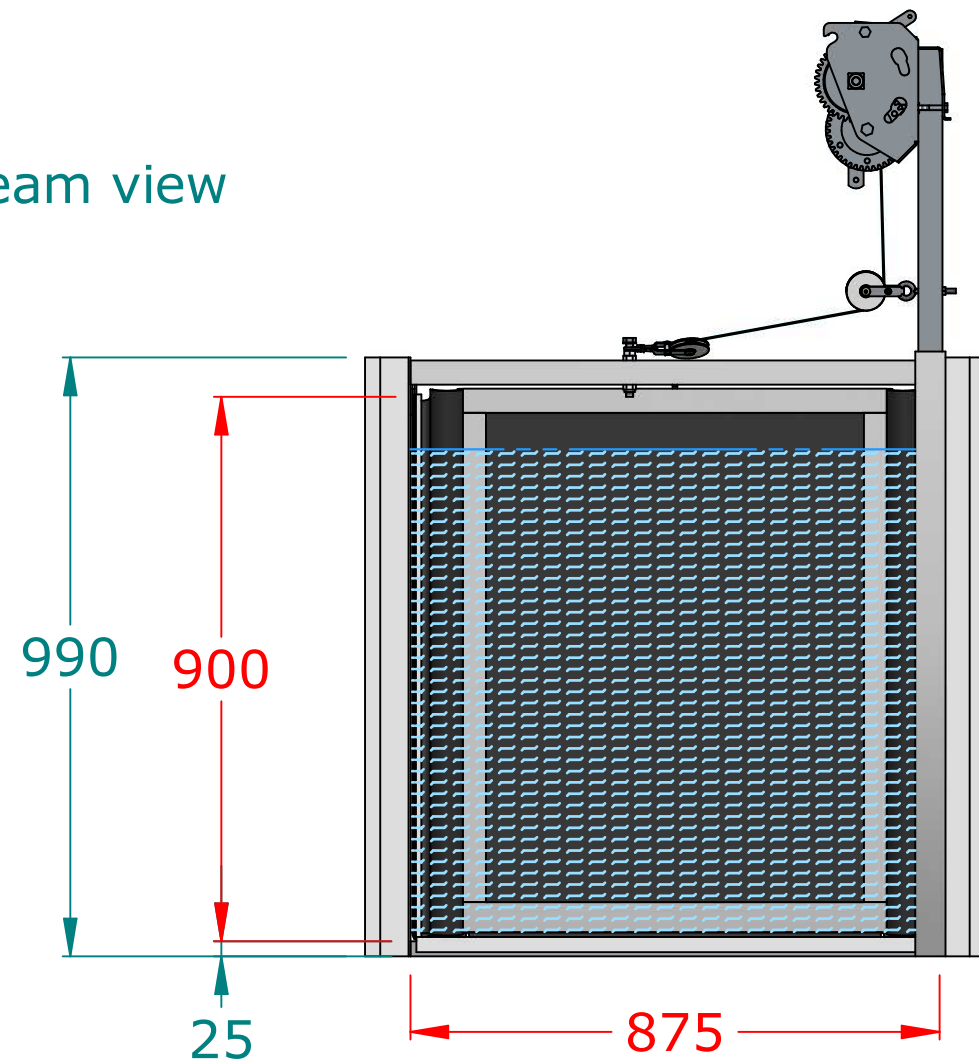

Insert W900xH900 - Fitted to L Stop - Rev1
General arrangement

- Recommended is 100mm of freeboard
on the upstream side of the rubber door.

Insert W900xH900 - L Stop Retrofit

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

All dimensions in millimetres unless otherwise stated.

info@padmanstops.com.au
tel. 03 5874 5282

